


LOC/DME I-CVN 108.9 Chan 26	APP CRS 037°	Rwy Ldg TDZE Apt Elev 7200 4205 4216
---	------------------------	--

ILS or LOC RWY 4

CLOVIS RGNL (CVN)

DME required. NA Circling NA to Rwys 8 and 26. For inop ALS, increase S-LOC 4 Cats C/D visibility to 1 SM.		MAISR AS	MISSED APPROACH: Climb to 4700 then climbing right turn to 6000 direct TXO VORTAC and hold.
AWOS-3PT 135.375	CANNON APP CON 118.425 352.1	UNICOM 122.8 (CTAF)	

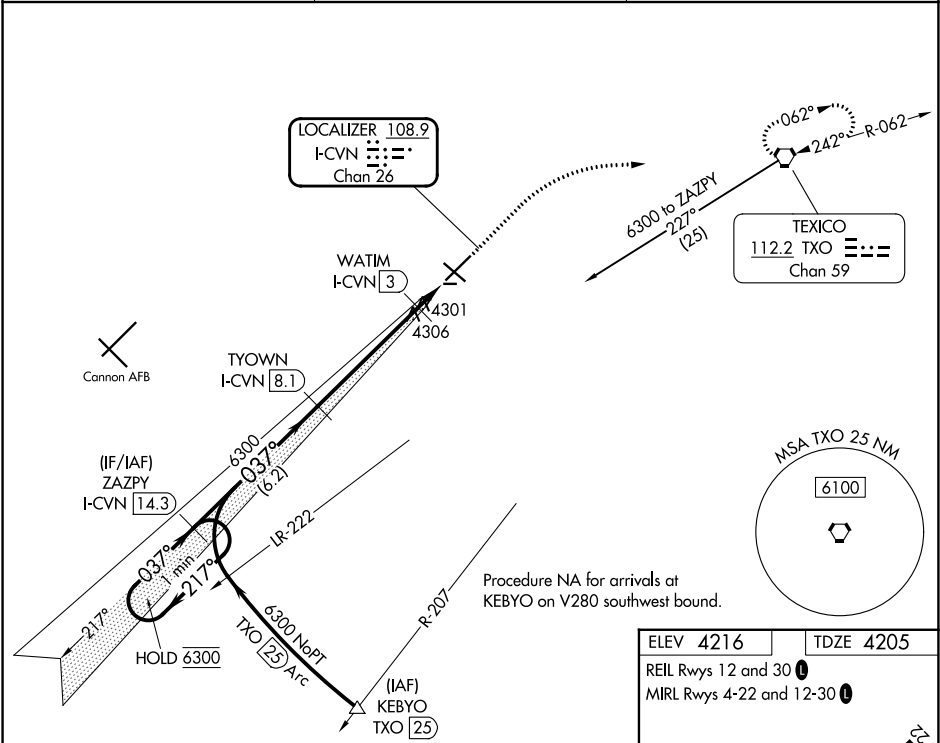

Use I-CVN DME when on the localizer course.					4700	6000	TXO
One Minute Holding Pattern					ZAZPY I-CVN 14.3	TYOWN I-CVN 8.1	
6300 ← 217° 037° → 6300 6.2 NM 5 NM 1.4 NM WATIM I-CVN 3 I-CVN 1.6 GS 3.00° TCH 53							
CATEGORY	A	B	C	D			
S-ILS 4	4405-½		200 (200-½)				
S-LOC 4	4560-½	355 (400-½)	4560-⅝		355 (400-⅝)		
CIRCLING	4680-1	464 (500-1)	4700-1½ 484 (500-1½)		4820-2 604 (700-2)		

ELEV 4216	TDZE 4205
REIL Rwys 12 and 30	
MIRL Rwys 4-22 and 12-30	
FAF to MAP 6.4 NM	
Knots	60 90 120 150 180
Min:Seq	6:24 4:16 3:12 2:34 2:08