

**COLDFOOT** (CXF)(PACX) 0 WSW UTC-9(-8DT) N67°15.13' W150°12.23'

**FAIRBANKS**

1049 B NOTAM FILE FAI

H-1A, L-4J

**RWY 02-20:** 4011X75 (GRVL) MIRL 0.4% up N

IAP

**RWY 02:** Brush.

**RWY 20:** Trees.

**SERVICE:** LGT ACTIVATE MIRL Rwy 02-20 and twy lgts—CTAF.

**AIRPORT REMARKS:** Unattended. Rwy condition not monitored, recommend visual inspection prior to using. Cold temperature airport. Altitude correction required at or below -18C.

**AIRPORT MANAGER:** 907-451-2207

**WEATHER DATA SOURCES:** AWOS-3P 118.0 (907) 269-2771. (WX CAM)

**COMMUNICATIONS:** CTAF 122.9

**COLDFOOT RCO** 122.0 (FAIRBANKS RADIO)

**ANCHORAGE CENTER APP/DEP CON** 124.6 352.0


**RADIO AIDS TO NAVIGATION:** NOTAM FILE BTT.

**BETTLES (H) (H) VOR/DME** 116.0 BTT Chan 107 N66°54.30'  
W151°32.15' 036° 37.6 NM to fld. 637/20E.

VOR AZIMUTH & DME unusable:

047°-077° byd 24 NM

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Fairbanks FSS dial 1-866-248-6516.

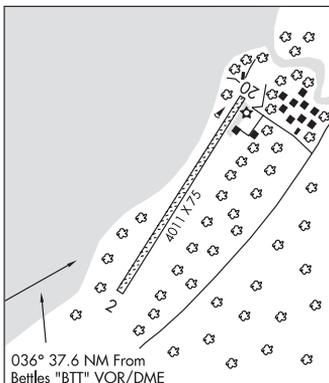

## COOPER LANDING

**QUARTZ CREEK** (JLA) 3 E UTC-9(-8DT) N60°29.06' W149°43.37'

**ANCHORAGE**

466 NOTAM FILE ENA

**RWY 04-22:** 2200X60 (GRVL-DIRT) 0.3% UP NE

**RWY 04:** Trees.

**RWY 22:** Brush.

**AIRPORT REMARKS:** Unattended. Ireg state maint, rcmd visual insp bfr Indg.

Rwy 04-22 edges not mkd. Windssock blw treeline, may be unreliable.

**AIRPORT MANAGER:** 907-262-1187

**COMMUNICATIONS:** CTAF 122.9

**RADIO AIDS TO NAVIGATION:** NOTAM FILE ENA.

**KENAI (H) (H) VOR/DME** 117.6 ENA Chan 123 N60°36.88'  
W151°11.71' 081° 44.3 NM to fld. 115/19E.

VOR unusable:

348°-015° byd 20 NM

DME unusable:

355°-041° byd 35 NM blo 2,000'

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Kenai FSS dial 1-866-864-1737.

